



The quickest way to set a

POST



Choose from



### Rapid Set Concrete

With an initial set time of 15 minutes, it's the fastest way to set posts in position.



### Quick Set High Strength Concrete


A higher strength version of Rapid Set Concrete, ideal for fence corners and large structural posts.

# The quickest way to set a

# POST

## You will need

- ✓ Spade or long handled shovel
- ✓ Crow bar or post hole auger
- ✓ Spirit level or plumb line
- ✓ Tape measure
- ✓ Measuring jug
- ✓ Clamps and bracing to hold the post steady

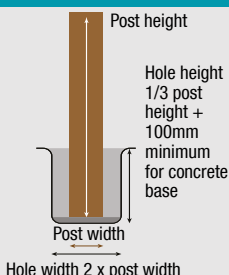

## Directions

### Dry Method



#### Step 1

Prepare your hole which should be twice the diameter of the post and one third of the post depth.



#### Step 2

Thoroughly wet hole.



#### Step 3

If needed, brace posts in position, making sure they are level.



#### Step 4

Add the required amount of concrete into the hole around the post. Do not mix. Ensure the post is level.



#### Step 5

Pour water on top of the concrete (approximately 2 litres for each 20kg bag).



#### Step 6

Immediately tamp the mix to make sure the concrete is consolidated.

### Wet Method (best for structural projects)



#### Step 1

On a mixing board or wheelbarrow, slowly add approximately 2.5 litres of water to the contents of one 20kg bag. A stiff, drier mix is best.



#### Step 2

Place the wet mixture into the hole around the post. Tamp the mix to make sure the concrete is consolidated.

**IMPORTANT** Wash all tools and equipment within 5 minutes of using to avoid the concrete becoming 'glued' to your equipment.

## Helpful tips

- Make sure you use protective gloves, eyewear and a mask when using dry ingredients.
- Post hole should be twice the diameter or the post.
- Post depth should be approximately a third of the post length.
- Clamps and bracing will prevent your post from slipping while you work.
- Dampen the wheelbarrow or board before mixing concrete.
- Allow to cure for two hours before continuing with the next construction stage.