



Faster, Better, Easier

How to install a cement floor underlayment for

TILES or CARPET



Specially formulated to provide a consistent, free-flowing strong screed underlay for tiles, carpets and vinyl flooring.

- Sand particles sieved to size for a smooth trowel finish
- Easy to deliver and store on site



How to install a cement floor underlayment for

TILES or CARPET

You will need

- ✓ Bucket
- ✓ Drill with mixing attachment
- ✓ Screed
- ✓ Float or trowel
- ✓ Measuring jug
- ✓ Latex bonding liquid

Preparation prior to application

Wet Areas



Wet Area Prep

Ensure surface is completely solid, dry, structurally sound and free of loose particles and contaminants. Waterproof any wet area surfaces.

Dry Areas



Dry Area Prep

All masonry, cementitious and other absorbent surfaces must be primed with a latex bonding agent like Easy Mix Prime & Bind prior to installation of screed.

Mixing and application guidelines




Mix

Into a clean bucket, add 1 litre of clean water and 1 litre of Easy Mix Prime & Bind per 20kg bag of Easy Mix Screed. Mix using a drill mixer on low speed until it is smooth and homogeneous.



Apply the Screed

Place the mixture onto the area to be filled. Level and plane to the desired thickness with an appropriate straight edge. Apply the desired surface finish using a wooden or polyurethane float.

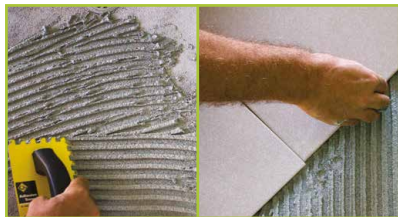

Installing tiles

Wait for Screed to cure (usually after seven days) and then apply tile adhesive in accordance with manufacturers instructions.

Helpful tips

- Make sure you use protective gloves, eyewear and a mask when mixing the dry ingredients.
- Discard any material that has exceeded the pot life or working time of the product.
- Allow the screed to cure for seven days before applying adhesive.